



CURVED TORSION SPRING - MAIN RUNNER SPLICE DETAIL

TYPICAL T-GRID ALIGNMENT SPLICE INSTALLATION

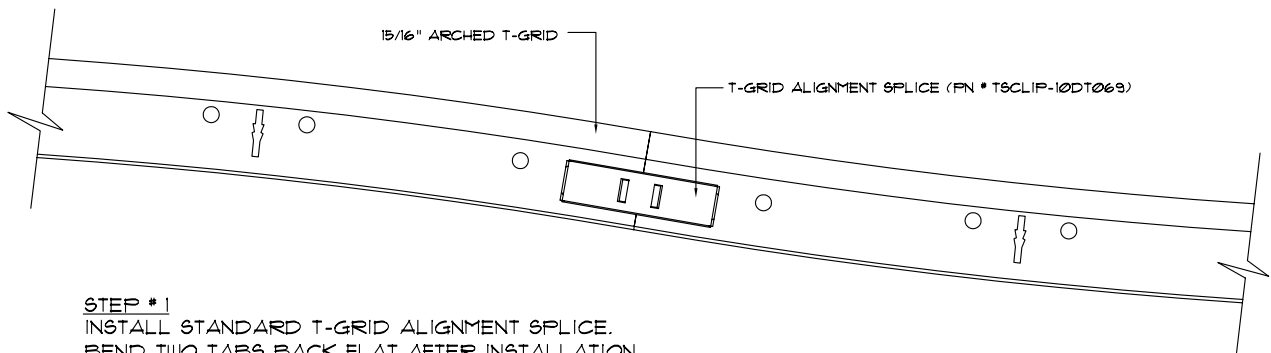

STEP #1
INSTALL STANDARD T-GRID ALIGNMENT SPLICE.
BEND TWO TABS BACK FLAT AFTER INSTALLATION

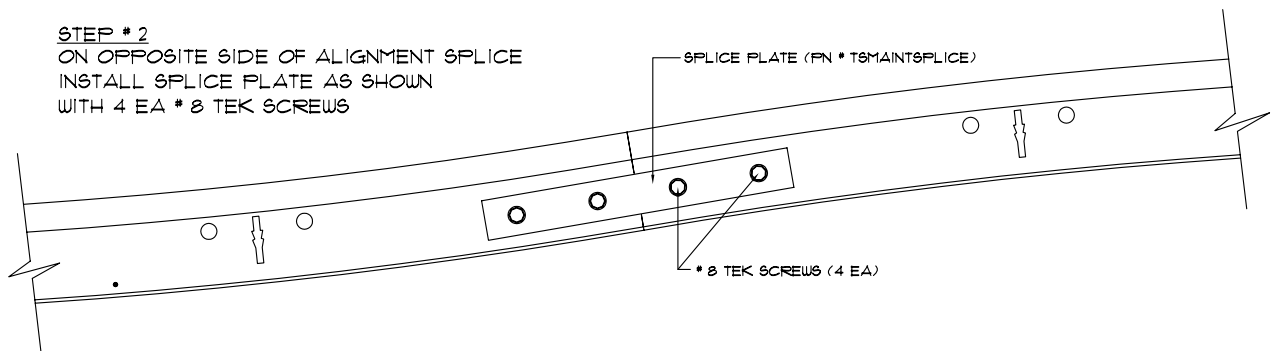

STEP #2
ON OPPOSITE SIDE OF ALIGNMENT SPLICE
INSTALL SPLICE PLATE AS SHOWN
WITH 4 EA #8 TEK SCREWS

HunterDouglas®

Architectural Products, Inc.

5015 OAKBROOK PARKWAY, SUITE 100 / NORCROSS, GA 30093
(770) 806-9551 • (800) 366-4321 • FAX (770) 806-0214

LUXALON®

A HunterDouglas® PRODUCT

PRODUCT CATEGORY CURVED TORSION SPRING - MAIN RUNNER SPLICE DETAIL
SCALE N.T.S. DWG. #: CTS-0006

ALL RIGHTS RESERVED. THIS DRAWING IS THE PROPERTY OF HUNTER DOUGLAS AND MAY BE USED ONLY IN CONJUNCTION WITH CONSTRUCTION PROJECTS UTILIZING HUNTER DOUGLAS PRODUCTS. THIS DETAIL MAY NOT APPLY TO ALL CONDITIONS OR CONSTRUCTION SITUATIONS. FOR NON-TYPICAL CONDITIONS, CONSULT HUNTER DOUGLAS.