


- ① INSERT DEMOUNTING TOOL IN REVEAL BETWEEN NATURA NEO PANELS AND SQUEEZE TO DISENGAGE PANEL/DEMOUNTABLE PANEL CLIP.

TO FIND LOCATIONS OF DEMOUNTABLE PANELS, TEST DEMOUNTING TOOL IN A FEW LOCATIONS. IF PANELS DO NOT DISENGAGE EASILY, MOVE ON TO THE NEXT ROW TO TEST. CARRIERS ALTERNATE FIXED AND DEMOUNTABLE CLIPS AT EVERY 5 LOCATIONS (1'-9 $\frac{7}{8}$ ").

- ② NOTE DEMOUNTABLE PANEL CLIPS ONLY DISENGAGE IN ONE DIRECTION.

- ③ NATURA NEO PANEL CAN NOW BE LOWERED FROM CARRIER.

FOR REINSTALLATION, ALIGN DEMOUNTABLE PANEL CLIP AND SNAP BACK ONTO CARRIER IN REVERSE DIRECTION FROM STEP 2.

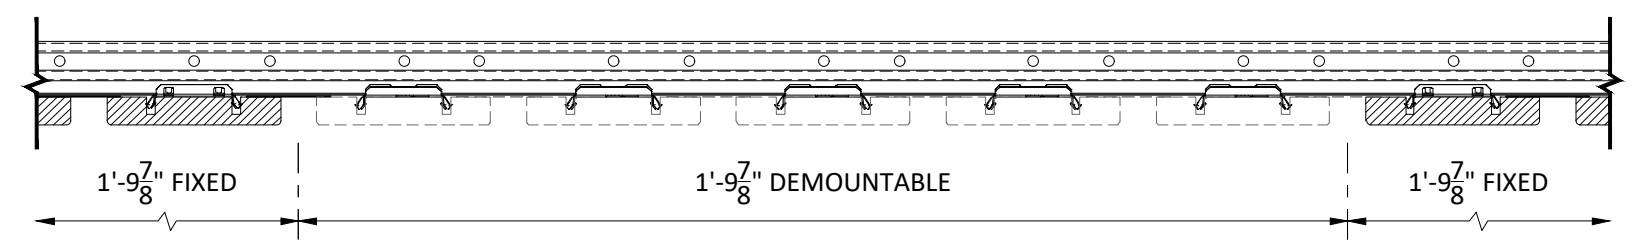

TYPICAL SECTION AT CEILING ACCESS
SCALE: 3" - 1'-0"

